

# Easy Scanner Link

No setting is required between  
**Uniwell POS and HC36 / SD1000 Uniwell Version.**  
You can use the scanner immediately after the cable is connected.

## Uniwell POS



DX-890

## Scanner HC36 / SD1000 Uniwell Version



Scanner HC36 or Scanner SD1000  
(Uniwell Version) (Uniwell Version)



TX-870



SX-8k



SX-6k



PX-6k



EX-5h



LX-5k



NX-5k

### Scanner Specification

Sensor	CCD
Light Source	Red LED
Interface	RS-232C
Connector	D-Sub 9 pin (Male) Uniwell Pin layout
Power	5V DC (Supply from ECR)

### Connectable Uniwell POS

DX-890 / TX-870 / SX-series / PX-series /  
EX-series / LX-series / NX-series



Uniwell Corporation  
<http://www.uniwell.com>

5-25, 3-chome, Tenma, Kita-ku,  
Osaka, JAPAN, 530-0043  
Tel : 81-6-6353-7021  
Fax : 81-6-6352-7104

E-mail : [contact@uniwell.com](mailto:contact@uniwell.com)